



Connected Voice User Guide

Updated December 2025

Table of Contents

<u>Star Codes Guide</u>	4
Social & Public Services.....	5
E911 Emergency Services	5
Address Validation.....	5
<u>Calling Features</u>	6
Call Screening.....	6
All Other Callers.....	6
Anonymous Callers.....	7
Custom Callers.....	8
Call Trace.....	9
Do Not Disturb.....	9
Call Forwarding.....	10
Call Forwarding Star Codes.....	10
Remote Access Forwarding.....	11
Call Waiting.....	12
Switching Calls.....	12
Star Codes.....	12
Caller ID.....	13
Star Codes.....	13
Do Not Disturb.....	14
Last Call Return.....	14
Three-Way Calling.....	14
Voicemail Local Access.....	15
Access Your Voicemail Box.....	15
Listen to Your Messages.....	15
Customize a Voicemail Box.....	15
<u>Voice Portal</u>	17
Sign In.....	17
Change Your Voice Portal Password.....	18
Dashboard.....	19
Call Screening.....	20
Call Handling.....	22

Calling Plans	29
History	29
Voicemail	30
Voicemail Box Details	30
Voicemail Box Greetings	31
Messages.....	31
Message Settings	32
Call History	33
Filters.....	33
Call Options.....	34
Email a Call History Report	35
Analytics.....	36
Inventory	36

Star Codes Guide

This is a handy guide to the star codes available on your service. Dial these codes to activate and deactivate certain features on your account.

CODE	DESCRIPTION	CODE	DESCRIPTION
*74	All Other Callers: Allow	*84+	Custom Callers: Allow
*64	All Other Callers: Block	*60+	Custom Callers: Block
*87	Anonymous Callers: Allow	*58+	Custom Callers: Block with Message
*77	Anonymous Callers: Block	*63+	Custom Callers: Forward
*97	Anonymous Callers: Enable Block with Message	*78	Do Not Disturb: Enable
*98	Anonymous Callers: Disable Block with Message	*79	Do Not Disturb: Disable
*72	Call Forward: All (On/Off)	*69	Last Call Return
*90	Call Forward: Busy (On/Off)	*95	Voicemail Management
*92	Call Forward: No Answer (On/Off)	SOCIAL & PUBLIC SERVICES	
*94	Call Forward: Out of Service (On/Off)	211	Essential Community Services
*67+	Caller ID: Block Next Call	411	Directory Assistance
*82+	Caller ID: Enable Next Call	511	Traveler Information (US)
*65	Caller ID: Manage (On/Off)	611	Customer Service
*57	Call Trace	711	Telecommunications Relay Service
*43	Call Waiting: Enable	811	Utility Location Services (US)
*44	Call Waiting: Disable	911	Emergency Services
*70+	Call Waiting: Disable Next Call	933	Emergency Services Verification (US)
		988	National Suicide Prevention Lifeline

Star Code +

To enable or disable the feature, dial the star code plus a voicemail PIN and/or phone number.

Social & Public Services

The following services provide quick access to special services based on the caller's location (according to caller ID), without the need for an area code.

CODE	FEATURE
211	<p>Essential Community Services</p> <p>Access to community information and referral services, such as essential needs, crisis, and disaster assistance. Visit http://www.211.org to learn about services in your area.</p>
411	<p>Directory Assistance</p> <p>Phone service used to look up a published telephone number and/or address listing.</p>
511	<p>Traveler Information (US)</p> <p>Local hotline for real-time information regarding traffic and road conditions. Not available in all states.</p>
611	<p>Pioneer Customer Service</p> <p>Dials Pioneer Customer Service.</p>
711	<p>Telecommunications Relay Service</p> <p>TTY uses operators to facilitate phone calls between people with hearing and speech disabilities and other individuals. A TTY call may be initiated by a person with or without a disability. Visit https://hamiltonrelay.com/oregon/ to learn more.</p>
811	<p>Utility Location Services (US)</p> <p>"Call Before You Dig" routes the caller to their local utility location services. Call a few days before beginning an excavation project to find out the location of underground utilities and reduce the risk of serious damage.</p>
911	<p>Emergency Services</p> <p>Calls to 911 (US or CAN) will be sent to the nearest Public Safety Answering Point (PSAP) based on the registered address. Both callback number and address are available to the PSAP on each call.</p>
933	<p>Emergency Services Validation</p> <p>Calls to 933 are sent to the caller's emergency services provider, who will then connect the call to their automated 911 verification service. The service will play back the dialing phone number and the address associated with it.</p>
988	<p>Suicide Prevention Hotline</p> <p>When a user dials 988, they will be connected to the National Suicide Prevention Lifeline (US) or Talk Suicide Hotline (CA) to speak with a trained crisis counselor who will listen, offer support, and get them the help they need.</p>

Calling Features

Call Screening

You have control to ensure you receive important calls. You can limit the callers who ring your phone, filter callers, or forward important callers to another number.

Calls from anonymous callers, or other callers, can be given special treatment, such as being blocked, sent directly to voicemail, forwarded to another phone number (like your mobile), or having a custom ring pattern assigned.

National Do Not Call Registry

You can also reduce the number of unwanted sales calls you get by signing up for the **National Do Not Call Registry**. It's free! Visit www.donotcall.gov to register your number.

All Other Callers

If you don't want to receive calls from anyone, use this feature to block all callers and then enable only custom (specific) callers to reach you.

CODE	DESCRIPTION
*74	<p>Allow All Other Callers All other callers (not otherwise specified in Call Handling settings) will be allowed.</p> <ol style="list-style-type: none"> 1. Dial the star code *74. 2. You will hear, "Your selective call accept service has been deactivated."
*64	<p>Block All Other Callers All other callers (not otherwise specified in Call Handling settings) will be blocked.</p> <ol style="list-style-type: none"> 1. Dial the star code *64. 2. You will hear, "Your selective call accept service has been activated."

Anonymous Callers

Calls from anonymous callers (those without caller ID) can waste your time and distract you from other calls you want to take. Block them from even ringing your phone.

CODE	DESCRIPTION
*77	<p>Block Anonymous Callers Calls without caller ID will be blocked and the caller will hear a busy tone.</p> <ol style="list-style-type: none"> 1. Dial the star code *77. 2. You will hear, "Your anonymous call rejection service has been activated. All incoming calls will be checked for number privacy before they are allowed to complete to your line."
*87	<p>Allow Anonymous Callers Calls without caller ID will be allowed.</p> <ol style="list-style-type: none"> 1. Dial the star code *87. 2. You will hear, "Your anonymous call rejection service has been deactivated."
*97	<p>Block Anonymous Callers with Message Calls without caller ID will be blocked and the caller will hear a message.</p> <ol style="list-style-type: none"> 1. Dial the star code *97. 2. You will hear, "Your anonymous call rejection service has been activated. All incoming calls will be checked for number privacy before they are allowed to complete to your line."
*98	<p>Unblock Anonymous Callers with Message Disables "Anonymous Callers: Block with Message." Anonymous calls will be allowed.</p> <ol style="list-style-type: none"> 1. Dial the star code *98. 2. You will hear, "Your anonymous call rejection service has been deactivated."

Custom Callers

Use this feature to control who can call your phone and what happens when they do. These settings can be managed in the Voice Portal or by star code.

CODE	DESCRIPTION
*84	<p>Allow Custom Callers Calls from the number specified will be blocked with a message. Use this feature if you've blocked all callers and want to allow a specific caller to contact you.</p> <ol style="list-style-type: none"> 1. Dial the star code *84. 2. Enter your voicemail PIN followed by #. 3. Enter the 10-digit phone number, starting with 1, followed by #. 4. You will hear, "Calls from [phone number] will be allowed."
*60	<p>Block Custom Callers Calls from the number specified will be blocked. Blocked callers will hear a busy signal.</p> <ol style="list-style-type: none"> 1. Dial the star code *60. 2. Enter your voicemail PIN followed by #. 3. Enter the 10-digit phone number, starting with a 1, followed by #. 4. You will hear, "Calls from [phone number] will be blocked."
*58	<p>Block Custom Callers with Message Calls from the number specified will be blocked with a message.</p> <ol style="list-style-type: none"> 1. Dial the star code *58. 2. Enter your voicemail PIN followed by #. 3. Enter the 10-digit phone number, starting with 1, followed by #. 4. You will hear, "Calls from [phone number] will be blocked."
*63	<p>Forward Custom Callers Calls from the number specified will be forwarded.</p> <ol style="list-style-type: none"> 1. Dial the star code *63. 2. Enter your voicemail PIN followed by #. 3. Enter the 10-digit phone number, starting with 1, followed by #. 4. You will hear, "Calls from [phone number] will be forwarded." <p>For forwarding to work, a <i>Forward To</i> number must be set up in the Voice Portal. If a number is not set, forwarded calls will fail over to the <i>All Other Callers</i> setting.</p>

Nomorobo Robocall Blocking

Nomorobo is a free service for users in the US that will block the telephone numbers of known telemarketers and robocallers. Basically, Nomorobo intercepts your calls and screens them for you. If the call is legitimate, it will ring through to your number, but if the call is from a robocaller or known telemarketer, Nomorobo hangs up for you. Learn more about it at <https://www.nomorobo.com/>.

1. Sign Up for Nomorobo

To get started, you first need to create a free account with Nomorobo.

1. Go to <https://www.nomorobo.com/> and click **[Get Started]** in the navigation menu.
2. For phone type, select Internet/VoIP Landline.
3. Select Pioneer Connect as your service provider.
4. Enter your email address, then click **[Sign Up]**.

2. Set Up Your Account

1. Check your email and open the *Welcome to Nomorobo!* message. Click the link in that email to begin the setup process.
2. Enter your first and last name, create a password, then click **[Create Account]**.
3. Your account has been created! Click the button to set up your phone.

3. Phone

1 Phone
Set up your phone

2 Carrier Setup
Set up your carrier

3 Verify
Check service

Please enter some information about your phone

Phone Type: -- Choose --

Carrier: -- Choose --

If 'Other' Carrier:

Phone Number: 1-

Description (optional):

PREVIOUS **NEXT**

1. Enter the following information:
 - **Phone Type:** Select Landline/VoIP.
 - **Carrier:** Choose Pioneer Connect as your service provider.
 - **Phone Number:** Enter your phone number.
2. Click **[Next]**.

4. Finish Setup in Connected Voice

1. Log in to your Connected Voice Portal at <https://connectedvoice.pioneer.net>
2. Go to your Call Handling settings.
3. Choose your preferred call handling type: **Sim Ring** or **Find Me**. (see below to learn the difference between Sim Ring and Find Me).
4. Enter your Pioneer phone number in the *Phone Number* field.
 - For *Find Me*, Nomorobo should be the first destination. Subsequent destinations should follow your call preferences.
5. Click **Save**.

SIM RING

Sim Ring enables a call to ring to multiple lines and/or phone numbers simultaneously. When a call comes in, Nomorobo will be the first to intercept the call. Legitimate calls will continue to ring your number, but if the call is from a robocaller or known telemarketer, Nomorobo hangs up for you. Your phone will ring once to let you know the robocall has been answered and stopped.

The screenshot shows the 'Sim Ring' configuration interface. At the top, there are four tabs: 'Ring Phone', 'Forward All', 'Sim Ring' (which is selected and highlighted in blue), and 'Find Me'. Below the tabs, there is a 'Phone Numbers' section with a text input field containing a placeholder '() - - - -' and the text 'Enter the Nomorobo number here' in red. To the right of this field is a '+ Add Number' button. Below the input field, there is a small text box that reads: 'Simultaneous Ring will ring all devices on this User and all numbers added to the list. The first Phone Number to pick up will take the call.' At the bottom, there is a 'No Answer' section with a dropdown menu set to 'Send to Voicemail', followed by the word 'after', a text input field containing '20', and the word 'seconds'.

FIND ME/FOLLOW ME (Preferred)

Find Me/Follow Me will ring each destination sequentially. When the first destination is set to Nomorobo, they will field the call and allow legitimate calls to ring the next destination. You will not hear the call come through, nor will you be notified that a call was intercepted and blocked.

Ring Phone Forward All Sim Ring **Find Me**

+ Add Destination

Phone Number **Enter the Nomorobo number here**

for 20 seconds

Device for 20 seconds

Timeout Action **Send to Voicemail**

Find Me Follow Me will ring each Destination sequentially. If the call isn't answered by any of the destinations, the call will be sent to the Timeout Action.

5. Verify in Nomorobo

1. Go back to your Nomorobo account by visiting <https://www.nomorobo.com/>.
2. On Step 3 Verify, click [I'm Ready. Call Me Now.]
3. You will immediately receive a call letting you know if everything is set up correctly. Please answer the phone after the third ring.

1 Phone Set up your phone 2 Carrier Setup Set up your carrier 3 **Verify** Check service

Verify Robocall Protection

Nomorobo will now call (801) 318-9821 to make sure that robocall protection is enabled.

Please pick up the phone **after** the status bar on the next page changes color.

PREVIOUS I'M READY. CALL ME NOW.

That's it! Your phone number is now listed as "Protected."

Call Trace

Call Trace allows you to mark a harassing or threatening phone call in your Call History. If necessary, you must take additional actions to establish a case with your local law enforcement agency.

CODE	DESCRIPTION
*57	Call Trace <ol style="list-style-type: none"> 1. After ending the call, dial the star code *57. 2. You will hear, "The previous call will be marked in your call history." 3. A new line for the trace will be entered in the Call History.

Do Not Disturb

When you don't want your phone to ring, activate Do Not Disturb to send all incoming calls directly to your voicemail box.

CODE	DESCRIPTION
*78	Enable Do Not Disturb <ol style="list-style-type: none"> 1. Dial the star code *78. 2. You will hear, "Do Not Disturb enabled." 3. All calls will be sent to voicemail.
*79	Disable Do Not Disturb <ol style="list-style-type: none"> 1. Dial the star code *79. 2. You will hear, "Do Not Disturb disabled."

Call Forwarding

When you aren't available to answer calls on your phone, you can forward your calls somewhere else. Call Forwarding can be set up in the voice portal or by star codes. In the Voice Portal, you can set up a schedule to forward calls during certain hours, like your lunch break.

Call Forwarding Star Codes

These star codes are applied to the line. For each Call Forwarding star code, the call handling options are: Busy Tone, Forward, and Send to Voicemail.

CODE	DESCRIPTION
*72	<p>Call Forward: All (On/Off)</p> <p>Choose where to forward all calls to your line.</p> <ol style="list-style-type: none"> 1. Dial the star code *72. 2. Enter your voicemail PIN followed by #. 3. Choose an option: <ul style="list-style-type: none"> – Enable: Press 1 to enter a forwarding number followed by #. – Disable: Press 2 to disable forwarding.
*90	<p>Call Forward: Busy (On/Off)</p> <p>Choose where to forward calls when you're on another call.</p> <ol style="list-style-type: none"> 1. Dial the star code *90. 2. Enter your voicemail PIN followed by #. 3. Choose an option: <ul style="list-style-type: none"> – Press 1 to enter a forwarding number followed by #. – Press 2 to send calls to voicemail.
*92	<p>Call Forward: No Answer (On/Off)</p> <p>Choose how calls will be handled when your line isn't answered.</p> <ol style="list-style-type: none"> 1. Dial the star code *92. 2. Enter your voicemail PIN. 3. Choose an option: <ul style="list-style-type: none"> – Press 1 to enter a forwarding number followed by #. – Press 2 to send calls to voicemail.

CODE	DESCRIPTION
*94	<p>Call Forward: Out of Service (On/Off)</p> <p>Choose how calls will be handled when your line is out of service or not registered.</p> <ol style="list-style-type: none"> 1. Dial the star code *94. 2. Enter your voicemail PIN followed by #. 3. Choose an option: <ul style="list-style-type: none"> - Press 1 to enter a forwarding number followed by #. - Press 2 to send calls to voicemail.

Remote Access Forwarding

When you're away from your phone but still want to receive calls, you don't need to get back to your phone to set things up. Unconditional call forwarding, or forwarding of all calls, is available remotely using the voicemail system, so it will continue to function even if there is a power outage, internet outage, or device failure.

1. From a phone not connected to your account, dial your 10-digit phone number.
2. When you hear your voicemail greeting, press #.
3. Enter your voicemail PIN followed by #.
4. Press 8 for Personal Options.
5. Press 5 to access the Call Forwarding menu.
 - Press 1 to forward all calls. Enter forwarding destination number followed by #.
 - Press 2 to send all calls to your line.

Call Waiting

With Call Waiting, you can see who is calling, even if you're on another call (as long as caller ID is supported on your phone). If a second call comes in while you're on a call, you'll hear the Call Waiting tone. To answer that call, you can choose to place your current call on hold and pick up the incoming call. Additionally, you can temporarily or completely enable or disable Call Waiting from your phone or in the Voice Portal.

Switching Calls

When Call Waiting is enabled on your phone, you can switch between your current call and a new incoming call.

1. When notified of a second incoming call, press the flash button or manual hook on your phone. Your first call will be placed on hold, and your second call will be active.
2. You can switch between the two calls by pressing the flash button or manual hook for the call you want to switch to.

Star Codes

CODE	DESCRIPTION
*43	<p>Call Waiting: Enable Enable Call Waiting for ALL of your calls.</p> <ol style="list-style-type: none"> 1. Dial the star code *43. 2. You will hear a message indicating call waiting has been activated.
*44	<p>Call Waiting: Disable Disable Call Waiting for ALL of your calls.</p> <ol style="list-style-type: none"> 1. Dial the star code *44. 2. You will hear a message indicating call waiting has been deactivated.
*70	<p>Call Waiting: Disable Next Call Keep the next phone call you make from being interrupted. If call waiting is enabled on the line, this star code will disable call waiting on the current call only.</p> <ol style="list-style-type: none"> 1. Dial the star code *70 + the phone number. 2. Call Waiting is disabled for the current call, and any incoming call will follow the "busy" call behavior. 3. After you hang up, Call Waiting will be active again.

Caller ID

The name sent with caller ID is a setting on your phone number. If the name on your outbound caller ID is incorrect, please contact Customer Support to update it.

Star Codes

Do you want to send your caller ID with every call? Or do you want to block it for every call but unblock it for the current call? Use the following star codes or log in to the portal to manage your caller ID settings.

CODE	DESCRIPTION
*82	<p>Caller ID: Enable Next Call If your caller ID is disabled (blocked) for all calls, this will enable it for this current call only. Future calls will not be affected.</p> <ol style="list-style-type: none"> 1. Dial the star code *82 + the number for the party you're trying to reach. 2. Caller ID will be displayed to the party on this call.
*67	<p>Caller ID: Block Next Call If your caller ID is enabled for all calls, this will block it from being sent with this current call only. Future calls will not be affected.</p> <ol style="list-style-type: none"> 1. Dial the star code *67 + the number for the party you're trying to reach. 2. Caller ID will be displayed as "BLOCKED" to the party on this call.
*65	<p>Caller ID: Manage (On/Off) Manage your caller ID setting for all calls.</p> <ol style="list-style-type: none"> 1. Dial the star code *65. 2. Enter your 4-digit PIN followed by #. 3. Follow the prompts to enable or disable caller ID.

Do Not Disturb

When you don't want your phone to ring, activate Do Not Disturb to send all incoming calls directly to your voicemail box.

CODE	DESCRIPTION
*78	Enable Do Not Disturb <ol style="list-style-type: none"> 1. Dial the star code *78. 2. You will hear, "Do Not Disturb enabled."
*79	Disable Do Not Disturb <ol style="list-style-type: none"> 1. Dial the star code *79. 2. You will hear, "Do Not Disturb disabled."

Last Call Return

CODE	DESCRIPTION
*69	Last Call Return Dials the last caller ID number that rang the line. It does not redial the last <i>outbound</i> call. <ol style="list-style-type: none"> 1. Dial the star code *69. 2. Your phone will redial the last number that called you.

Three-Way Calling

Three-way calling lets you bring two parties into the same call so all may participate in the same conversation.

1. While on an active call, press and release the switch hook or flash button on your phone. The first party will be placed on hold.
2. Listen for a second dial tone and then dial the phone number of the second party.
3. After the second party answers, press and release the switch hook or flash button to join both parties into the call.

Voicemail Local Access

Your voicemail box can be accessed in the Voice Portal, remotely, or by dialing a star code from a phone connected to the account.

Access Your Voicemail Box

Direct Access

1. From a line assigned to your voicemail box, dial the star code *95.
2. Enter your voicemail PIN and press #.

Remote Access

1. From a line *not* assigned to the voicemail box, dial your 10-digit phone number.
2. When the greeting plays, press #.
3. Enter your voicemail PIN and press #.

Listen to Your Messages

A stuttered dial tone indicates your voicemail box has unread messages. This tone lets you know you have new messages or messages marked as unread in your voicemail box.

To listen to your messages, access the voicemail box and **press 1**. Use the following to navigate the menu:

- **Press 1:** Skip message and mark it as "unread"
- **Press 2:** Save message and mark it as "read"
- **Press 3:** Erase message
- **Press 9:** Repeat message
- **Press 0:** Exit menu

Voicemail PIN

The default PIN is 1234. The first time you access your voicemail box, you will be prompted to set a new PIN which must be 4-digits or longer.

Customize a Voicemail Box

Personal Options

Access the voicemail box and **press 8** for personal options. Use the following to navigate the menu:

- **Press 1:** Change the PIN
- **Press 2:** Personalize your greeting
- **Press 3:** Record your personal name
- **Press 5:** Set up Call Forwarding
- **Press 6:** Set Up a Call Screening Forwarding Number
- **Press 9:** Repeat personal options
- **Press 0:** Exit menu

Change the PIN

1. Access your voicemail box and press 8 for personal options.
2. Press 1 to change the PIN.
3. Enter a new PIN that is at least 4-digits long, then press #.
4. When you're done, hang up or press 0 to go back to the main menu.

Change Your Greetings

1. Access your voicemail box and press 8 for personal options.
2. Press 2 to change your greetings.
 - Press 1 to change the default (basic) greeting.
 - Press 2 to change the "busy" greeting.
 - Press 3 to change the "no answer" greeting.
3. When you're done, hang up or press 0 to go back to the main menu.

Power/Connectivity Failure

In the event of a power outage, internet outage, or device failure, incoming calls will go to voicemail. Call Forwarding, Sim Ring, or Find Me/Follow Me will continue to function, and you will still be able to access your voicemail messages from another phone.


Voice Portal

Sign In

The Voice Portal is where you can control who can contact you, how they will reach you, and when they can reach you. Many features can also be managed by dialing star codes.

To get your login information, contact Customer Support at 866-929-1212 or dial 611 from your Pioneer Connect phone.

1. Go to <https://connectedvoice.pioneer.net>
2. Enter your email address or username and password.
3. Check *Remember Me* if you want to save your username and password.
4. Click **[Login]**.

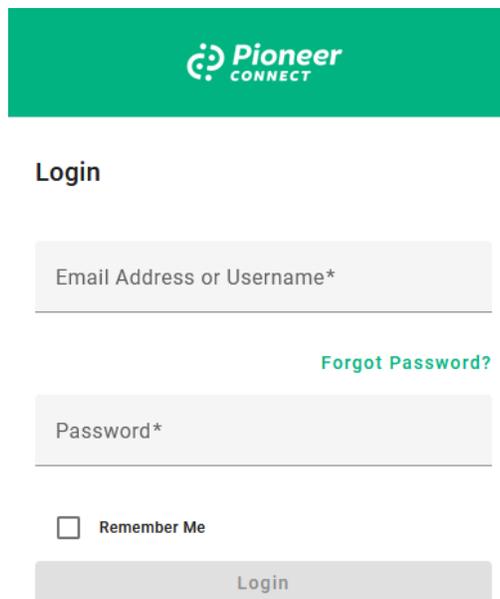

The screenshot shows the login interface for Pioneer Connect. At the top is a green header with the Pioneer Connect logo. Below the header is the word "Login" in bold. There are two input fields: "Email Address or Username*" and "Password*". A link for "Forgot Password?" is located between the two fields. Below the password field is a checkbox labeled "Remember Me". At the bottom is a "Login" button.


First-Time Login

The first time you log in, you'll be prompted to set a password. Your password must be 8–64 characters long and include at least one number and one special character.


Change Your Voice Portal Password

If you can't log in, contact Customer Support to reset your password. But if you can log in, you can change your password in the Voice Portal.

1. Expand the drop-down menu in the top-right corner of the screen and click **Change Password**.
2. Enter your new password and then confirm it in the field below.
 - Your password must be 8–64 characters long and include at least one number and one special character.
3. Click **[Confirm]**.

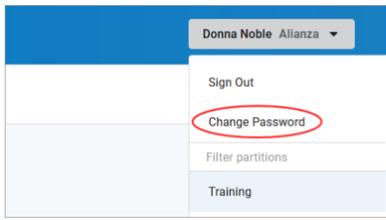

The screenshot shows the top-right corner of the Voice Portal interface. A blue header bar contains the text 'Donna Noble Alianza' with a dropdown arrow. Below this, a white menu is open, listing 'Sign Out', 'Change Password' (circled in red), 'Filter partitions', and 'Training'.

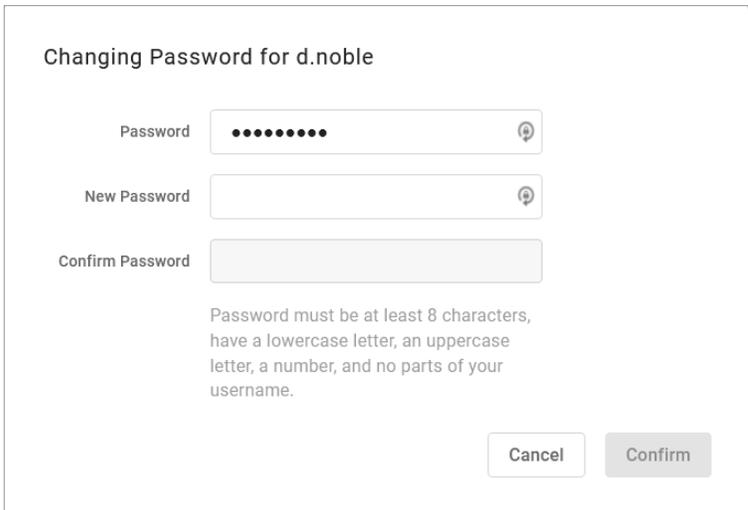

The screenshot shows the 'Changing Password for d.noble' form. It has three input fields: 'Password' (filled with dots), 'New Password', and 'Confirm Password'. Below the fields is a password requirement message: 'Password must be at least 8 characters, have a lowercase letter, an uppercase letter, a number, and no parts of your username.' At the bottom right are 'Cancel' and 'Confirm' buttons.

Dashboard

Welcome to home base, otherwise known as your Dashboard. Here, you can access basic account information and useful tools for handling incoming calls.

Donna Noble
Home Phone Documentation

Home Phone

Dashboard

Voicemail

Call History

Dashboard

Phone Number **1 (260) 589-5335**

E911 Address **417 North Dr
Geneva, IN 46740**

Caller ID Name (CNAM) **Noble Donna**

Enable Caller ID

Device MAC Address **ae111bdf352c**

Device Type **Cisco 8832 (3PCC)**

Registration Status **Yes ✓**

Configuration Status **Yes ✓** [Details ▾](#)

Caller ID Name, 911 Address, Directory Listing are edited by Phone Number.

In the first section, you can see information that comes with your service.

E911 Address

In the event a 911 call is placed from your phone number, emergency services will be dispatched to the address listed here. If this is not the address of your physical location, please contact Customer Service immediately.

1 (260) 589-5335

Customer Service Record

Address Preview 417 North Dr
Geneva, IN 46740

E911 Record

Same as CSR Record

Individual Company

Postal Code 46740

Enter Address 417 North Dr, Geneva IN

Address Preview 417 North Dr
Geneva, IN 46740 [Manual Entry ▾](#)

Provide Lat/Long

[Dismiss](#) [Save](#)

Important

If any of your account information is NOT correct, please contact Customer Service right away to update your E911 record.

Enable Caller ID

The Enable Caller ID setting determines whether your caller ID is sent when placing an outbound call. Check this box if you want to send your name and phone number to the call recipient or uncheck it to send your caller ID as BLOCKED. This setting can also be managed by [dialing star codes](#).

Please note, even if the setting is disabled, the number listed in the *Phone Number* field will still be sent with 911 calls.

Call Screening

Call Screening can help block unwanted calls from reaching you, and you can decide what happens to the calls you turn away. Are they hung up on automatically, or do they hear a message first? Do you forward them to another number, or do you send them to your voicemail?

Choose how calls from anonymous numbers (callers without caller ID), toll-free numbers, and other callers—including Custom Callers (specific phone numbers)—will be handled. For each category, choose a screening behavior from the drop-down menu.

These settings can also be managed by [dialing star codes](#).

Call Screening

Screening Forward Number
This is the destination Number used when Forward is selected as a Call Screening setting.

Anonymous Caller

Toll-free Caller

All Other Callers

Custom Caller(s)

<input type="text" value="18015551234"/>	<input type="text" value="Block"/>	✕
<input type="text" value="18015559876"/>	<input type="text" value="Block"/>	✕

[... and 1 more](#)

Call Screening Categories

FEATURE	DESCRIPTION
[+ Add Caller]	Starts the process of setting up call screening behaviors for a specific phone number.
Screening Forward Number	Enter a destination phone number that will be used when This is the destination number used when a call screening category is set to <i>Forward</i> .
Anonymous Caller	Choose what happens to incoming calls that do not send caller ID.
Toll-Free Caller	Choose what happens to incoming calls from a toll-free number.
All Other Callers	Choose what happens to all other incoming calls, unless otherwise defined by a custom rule.
Custom Callers	Click [+Add Caller] to define the screening behavior for a specific phone number. If there are more than two custom callers, click ...and X more at the bottom to see them.

Call Screening Behaviors

For each category, choose a screening behavior from the drop-down menu.

FEATURE	DESCRIPTION
Allow	Allow the caller to ring through.
Allow with Priority Ring	Allow the caller to ring through with a priority ringtone. Choose from 7 other ring patterns.
Block	Block the caller from ringing through. Callers will hear a busy signal.
Block with Message	Block the call with a message: <ul style="list-style-type: none"> • Custom Callers: "The number you have dialed is not accepting calls at this time." • Toll-Free Callers: "The number you have dialed is not accepting calls from toll-free numbers at this time." • Anonymous Callers: "The number you have dialed is not accepting calls from anonymous numbers."
Forward	If you choose to forward calls from the caller, you must choose the number those calls are forwarded to in the <i>Screening Forward Number</i> field.
Voicemail	Caller will be sent to your voicemail box.

Call Handling

Call Handling determines how incoming calls are routed under various circumstances. In the first section, create or manage your Call Handling Schedules, Call Waiting, and Do Not Disturb settings. Just below that, select and configure a ring strategy for incoming calls.

Call Handling

Scheduling 1 Schedule

Call Waiting

Do Not Disturb Send incoming calls to voicemail

No Answer after seconds

Busy

Out of Service

Out of Service Forward Description

FEATURE	DESCRIPTION
Scheduling	Create or manage schedules that determine how incoming calls are routed during specific times. See Schedules for more information.
Call Waiting	<p>Check this box to enable Call Waiting, which will allow a second call to ring through while you are already on the phone.</p> <ul style="list-style-type: none"> Enabled: When you're on a call, you'll hear a tone to let you know a second caller is trying to reach you. Disabled: While you're on a call, incoming calls will hear a busy tone.
Do Not Disturb	<p>Check this box to enable Do Not Disturb.</p> <ul style="list-style-type: none"> Enabled: Incoming calls are sent directly to your voicemail box. Disabled: Incoming calls follow your Call Handling settings. <p>If DND is enabled but you don't have a voicemail box, callers will hear a busy tone. If you have a voicemail box but want callers to hear a busy tone, your voicemail box will need to be removed.</p>

Ring Phone

This is the path incoming calls will follow when the call isn't answered, the line is busy, or the device is out of service. For each circumstance, callers can be sent to voicemail, hear a busy tone, be forwarded to another number, or ring forever.

	Ring Phone	Forward All	Sim Ring	Find Me
No Answer	Send to Voicemail	after	20	seconds
Busy	Busy Tone			
Out of Service	Forward to	1 (435) 555-2948		

FEATURE	DESCRIPTION
No Answer	The call is unanswered after a specified number of seconds.
Busy	The device is busy (already in use and Call Waiting is not enabled).
Out of Service	The device has lost power or is otherwise not registering as an active device.

Forward All

Working on the go and still want all the calls that come into your desk phone to reach you? Do all incoming calls need to be redirected elsewhere? Forward All does this by sending your callers to the phone number that you enter here.

Enter a forwarding number and an optional description.

Once a *Forwarding Number* is entered, this feature can be enabled or disabled from the device by dialing star codes.

	Ring Phone	Forward All	Sim Ring	Find Me
Forwarding Number	1 (801) 555-1234			
Forwarding Number Description	Optional			

Simultaneous Ring

Simultaneous Ring, or Sim Ring, will ring all numbers added to the list until the call is answered or times out. The first phone number to pick up will take the call.

You can add a limit to how long the call will ring, and after it's timed out have it sent to voicemail, forwarded to another number, or given a busy tone. If you like, you can also set the call to ring indefinitely.


FEATURE	DESCRIPTION
Phone Numbers	Enter the phone number(s) that will ring. To add another number to the list, click [+Add Number] .
No Answer	<p>Choose what happens when the call is unanswered:</p> <ul style="list-style-type: none"> • Busy Tone • Forward to (add a forwarding number) • Ring Forever • Send to Voicemail <p>Also, enter the number of seconds the call will ring before the action is triggered. Calls that ring longer than 120 seconds may be disconnected by the carrier.</p>

Voicemail

It is possible that voicemail for these other numbers could pick up the call before the timeout, if the user's timeout is shorter than what is set here.

Find Me/Follow Me

Life happens and often drags you away from the desk. What's a caller to do when they need to find you? Find Me/Follow Me will route your incoming calls to a customizable sequence of destinations to create a unique dial plan just for you and your line.

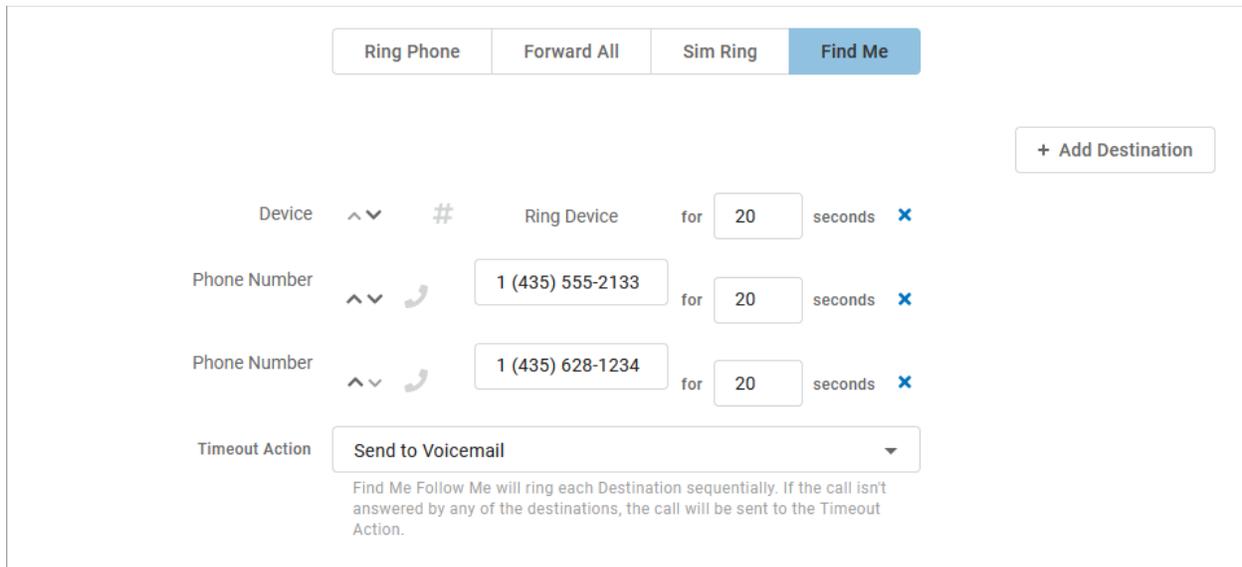


FEATURE	DESCRIPTION
Destinations	<p>Indicate if calls should route through  Devices or # Phone Numbers by clicking the respective icons.</p> <ul style="list-style-type: none"> • Use the   arrows to reorder the destinations. • Click [+ Add Destination] to add more destination fields.
Devices	<p>In the field provided, enter a timeout setting. Remember, calls that ring longer than 120 seconds may be disconnected by the carrier.</p>
Phone Number	<p>Enter the phone number calls should progress to and how long each number will ring.</p>
Timeout Action	<p>Choose what will happen to the call after all destinations have timed out:</p> <ul style="list-style-type: none"> • Busy Tone • Send to Voicemail

Schedules

Schedules provide custom routing for your callers based on when they call, down to the very minute. Schedule times follow your account's default time zone.

Within the scheduler, the Call Handling options are: Ring Phone, Forward All, Sim Ring, and Find Me. The main Call Handling section will take effect *outside* of these hours.

1. Within the Call Handling section, click **[Create Schedule]**.
2. If there are already schedules set up on the account, the button will say **[Manage Schedules]**.

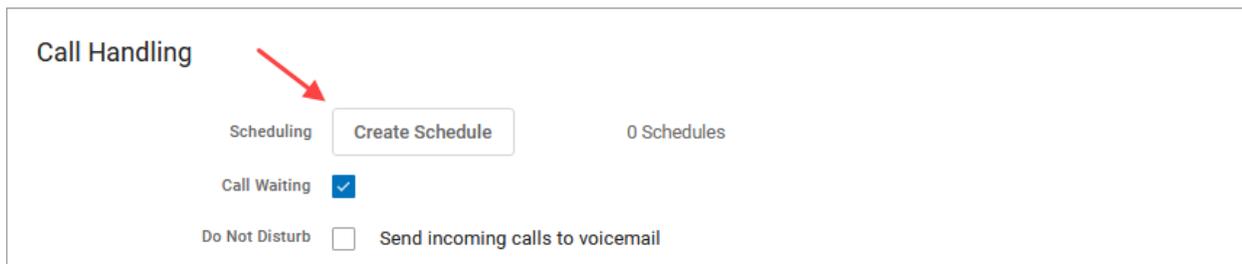


Call Handling

Scheduling **Create Schedule** 0 Schedules

Call Waiting

Do Not Disturb Send incoming calls to voicemail


3. In the Scheduling window, click **[+Add Schedule]**.

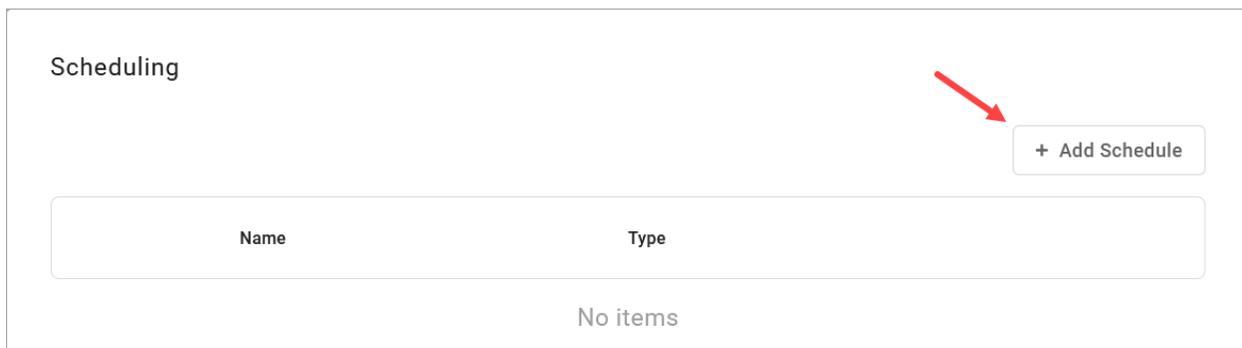

Scheduling

+ Add Schedule

Name	Type
No items	

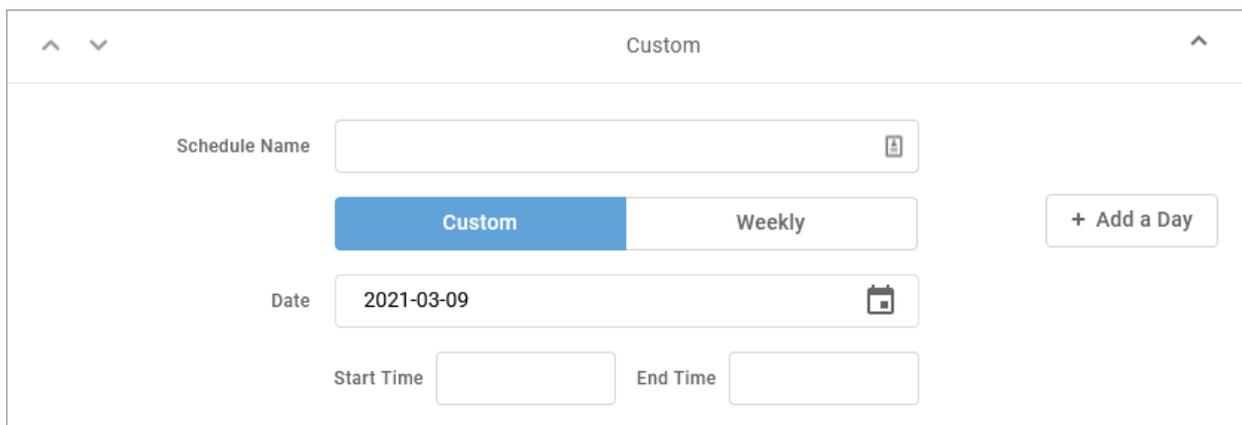

Custom

Schedule Name

Custom Weekly **+ Add a Day**

Date

Start Time End Time

4. **Schedule Name:** Give the schedule a name.
5. **Type:** Choose whether this schedule is for specific dates (Custom) or recurring (Weekly).

- On a Custom schedule, click **[+ Add a Day]** to add another section.

The screenshot shows the 'Custom' schedule configuration interface. At the top, there are expand/collapse arrows and the title 'Custom'. Below this is a 'Schedule Name' input field with a lock icon. A toggle bar shows 'Custom' selected and 'Weekly' unselected. Below the toggle are two identical sections for adding days. Each section has a 'Date' field with a calendar icon and a blue 'x' delete button. The first 'Date' field contains '2021-03-09'. Below each date field are 'Start Time' and 'End Time' input fields. A red arrow points from a '+ Add a Day' button to the second 'Date' field.

- On a Weekly schedule, enter the start and end times for the days of the week you want this call handling to be in effect.

The screenshot shows the 'Weekly' schedule configuration interface. At the top, there are expand/collapse arrows and the title 'Weekly'. Below this is a 'Schedule Name' input field with a lock icon. A toggle bar shows 'Custom' unselected and 'Weekly' selected. Below the toggle are seven rows, one for each day of the week (Sun, Mon, Tue, Wed, Thu, Fri, Sat). Each row has a 'Start Time' and 'End Time' input field.

6. **Call Handling:** Choose what will happen to calls *during* the schedule.

Call Handling

Call Waiting

Do Not Disturb **Send incoming calls to voicemail**
 If you'd like callers to hear a busy tone, remove the voicemail box.

No Answer after seconds

Busy

Out of Service

7. Click **[Confirm]** and then **[Save]**.

Example of a Custom Schedule

In the custom schedule example below, calls received between 5:00 AM and 5:00 PM on November 15, 2019, will be forwarded to 1-208-582-1676. Any call outside of that specific time will follow the call handling set up in the main Call Handling section.

Thanksgiving
Custom

Schedule Name

Date

Start Time End Time

Call Handling

Call Waiting

Do Not Disturb **Send incoming calls to voicemail**
 If you'd like callers to hear a busy tone, remove the voicemail box.

Forwarding Number

Calling Plans

The calling plan(s) assigned to your account dictate where you can call. Expand a Calling Plan to see how many minutes have been used this month.

Calling plan minutes refresh at midnight UTC on the first of the month. These minutes are not used for billing purposes but for your reference.

For changes to permitted calling areas, please contact Customer Support.

Calling Plan	Total Minutes	Minutes Used
US48 + Canada Unlimited (Base)	Unlimited	37

History

The last call made on the account is displayed here.

History
<p>Last Call 1 (740) 555-1988→1 (740) 555-4416 (11 seconds) May 17, 2021 5:35 PM EDT</p>

Voicemail

A voicemail box was assigned to you with your service. In the Voice Portal, you can upload your voicemail greetings and personal name recordings, view and manage any saved messages, and set up voicemail forwarding to email.

Voicemail messages and greetings can also be managed by calling your voicemail box. See [Voicemail Local Access](#) for more information.

Voicemail Box Details

Hover over a voicemail box and click **Edit** on the right to view the details.

Field	Description
Voicemail Box Name	The name of the voicemail box. The name can be edited here, if necessary.
Owner	The user assigned to this voicemail box.
Language	The language heard in the Voicemail menu: English or French.

Voicemail Box Greetings

Users can upload and download their voicemail greetings and personal name recordings. Click the field to select a file from your computer, then click **[Upload]**. The upload will accept WAVE, MP3, and OGG files that are less than 10MB.

Voicemail Box Greetings i

Basic Greeting

Accepted files: WAVE, MP3, and OGG files under 10MB

Personal Name

Accepted files: WAVE, MP3, and OGG files under 10MB

Custom Greetings

Any custom voicemail greeting upload here will override basic and personal name greetings.

Busy Greeting

Accepted files: WAVE, MP3, and OGG files under 10MB

No Answer Greeting

Accepted files: WAVE, MP3, and OGG files under 10MB

Messages

Voicemail messages saved to the box are listed here. Messages can be sorted by Time/Date, Length, and Status (New or Saved). Hover over an individual message to see the management tools on the right.

Visual Voicemail 🗑️

<input type="checkbox"/> Time/Date ↓	Originating Number	Length	Status	
<input type="checkbox"/> Mar 11, 2021 8:36 AM	1 (385) 555-5823	6 seconds	New	
<input type="checkbox"/> Mar 2, 2021 10:18 AM	1 (303) 555-9417	17 seconds	New	<input type="button" value="Download"/> <input type="button" value="Email"/> <input type="button" value="Delete"/>
<input type="checkbox"/> Jan 8, 2021 12:19 PM	1 (361) 555-4435	40 seconds	New	
<input type="checkbox"/> Jan 4, 2021 8:35 AM	1 (801) 555-6530	41 seconds	New	

1-4 of 4 < >

Field	Description
 Download	Save a copy of the message to your computer as an MP3 file.
 Save	Change the status of the message to <i>Saved</i> .
 Delete	Delete this message from the box. To delete all or multiple messages at once, select the message on the left and then click the trash icon at the top right.

Message Waiting Indicator

The message waiting indicator (MWI) on the user's device notifies them when a new voicemail message is available. Once the message has been listened to or deleted, the MWI will turn off.

Message Settings

Message Settings

Forward Voicemail to Email Forward voicemail messages

Keep a copy in voicemail box

Forward Voicemail to Email

Messages left on the user's voicemail box can be forwarded as an MP3 file to one or more email addresses. Users also have the option to keep a copy of the message in their voicemail box when it's forwarded.

1. Check *Forward Voicemail to Email*.
2. Optionally, check *Keep a copy in voicemail box*.
 - When checked, the message waiting indicator (MWI) on the user's device will stay on until they've listened to or deleted the message from their voicemail box.
3. Enter one or more email addresses, each separated by a comma.
4. At the bottom of the section, click **[Save]**.

Call History

Call History holds the records of all calls made and received on the account. Calls are listed in chronological order with the most recent call at the top. Call data is organized into columns that show the date and time of the call, where the call originated (From), and where the call terminated (To).

At the top right of the page, the current record list can be emailed as a CSV file.

Call History

✉ Email CSV

Date Range
 10/21/2023 – 11/20/2023

Start time
 12:00 AM

End time
 11:59 PM

Filters

↻

Date	From	To	
November 20, 2023 at 4:19 PM EST 0 seconds	1 (555) 555-0123 SANDY, UT	1 (222) 222-3456 PROVO-OREM, UT	⋮
November 20, 2023 at 4:14 PM EST 1 minutes	1 (555) 555-0123 SANDY, UT	1 (222) 222-3456 PROVO-OREM, UT	⋮
November 20, 2023 at 4:14 PM EST 10 seconds	1 (555) 555-0123 SANDY, UT	1 (222) 222-3456 PROVO-OREM, UT	⋮

Filters

Apply call filters to locate specific call records. Once your parameters are set, the matching call records are displayed below.

- **Search:** Enter a number in the *Search phone numbers* field to search for a specific phone number or extension. Results automatically populate after the first three digits are entered.
- **Date/Time:** Modify the date and time ranges or delete them entirely to gather the data you need. By default, the last 30 days of call records are shown that occurred between 12:00 AM and 11:59 PM, based on the account's time zone settings.
- **Filters:** Click **[Filters]** to filter the call records by Direction, Number, and/or Call Flags.
- **Reset:** When you're finished with your search, click **Reset Filters** to remove any parameters and display all calls.

Date Range: 9/26/2023 – 10/26/2023

Start time: 12:00 AM
End time: 11:59 PM

Filters

Direction

- Inbound
- Outbound

Number

- From
- To

Call Flags

- Answered
- Busy
- Forwarded
- Missed
- Sent To VM

Call Options

To view a call's details, click the  menu on the right. The option to block the number is also available for inbound calls.

November 20, 2023 at 4:19 PM EST 0 seconds	1 (555) 555-0123 SANDY, UT	1 (222) 222-3456 PROVO-OREM, UT	
November 20, 2023 at 4:14 PM EST 1 minutes	1 (555) 555-0123 SANDY, UT	1 (222) 222-3456 PROVO-OREM, UT	Block Number Details
November 20, 2023 at 4:14 PM EST 10 seconds	1 (555) 555-0123 SANDY, UT	1 (222) 222-3456 PROVO-OREM, UT	

Block Number

If necessary, you can block an inbound caller from making additional calls to either the user or the account.

1. Click **[Block Number]**.
2. Select whether the number should be blocked on the user or the account.
3. Click **[Confirm]** to add the inbound phone number to the blocked caller list (in [Call Screening](#)).

Select Screening Location

- User
- Account

Cancel Confirm

Details


Call details include the date, time, and length of the call, as well as the cost, origination, dialed, and termination information.

Field	Description
Time and Length	When the call started, connected, and ended, what duration of the call was billed, and the actual length of the call.
Cost	The cost of the call, if the call was within the calling plan, and the rate per minute from the plan.
Origination	The number and location of the originating call, and if the call came from on or off Alianza's network.
Dialed	The number that was originally dialed by the call's originator.
Termination	The number and location of the call recipient user that received the call, and if they were on or off Alianza's network.

Email a Call History Report

Once you've applied the appropriate filters to locate the data you need, you can export the data into a CSV file.


1. At the top right of the Call History page, click  **Email CSV**. A banner displays on the page to indicate that your report is being generated.
2. When the file is ready, an email is sent with a link to download the report. The link **expires in 7 days** and can only be used once. Here's an example of what the email looks like:

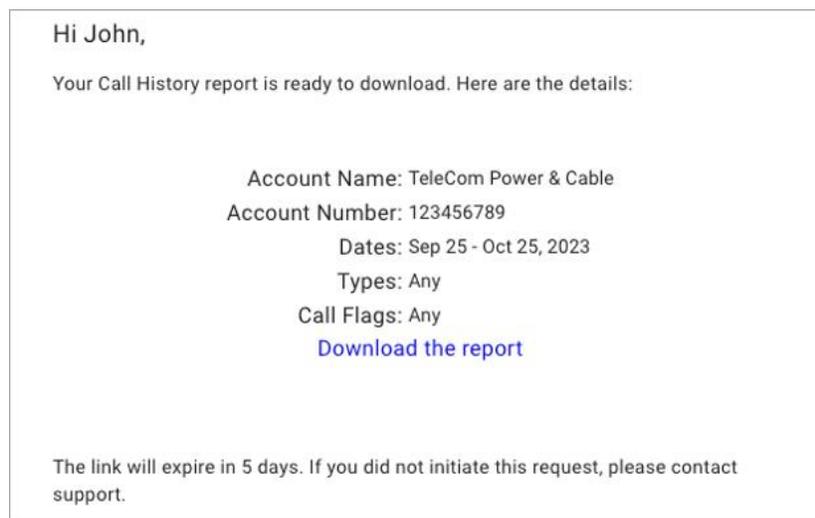

Analytics

Inventory

The inventory dashboard displays a read-only view of your product, the account status (Active, Suspended, or Disabled), the date the status was last updated, and number of lines in your account.

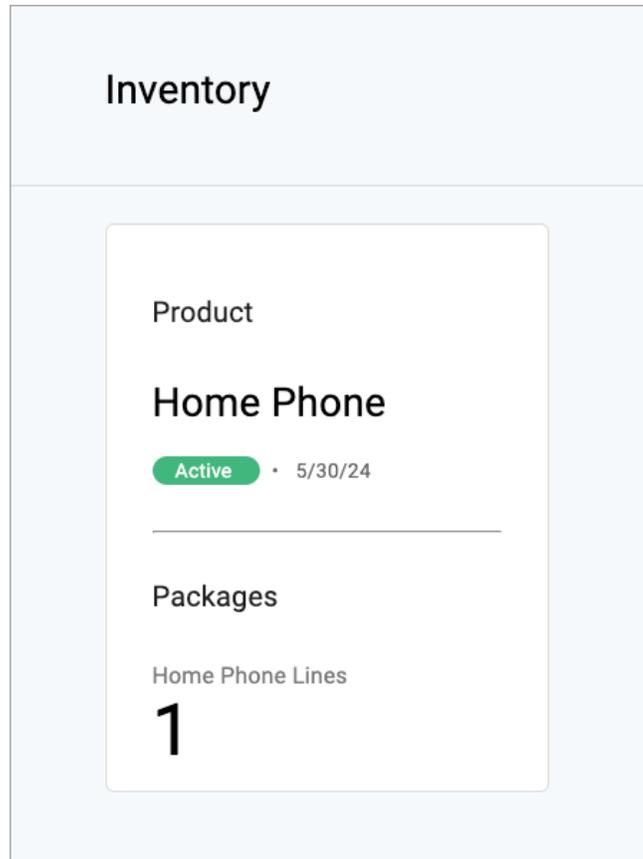



© 2025 PIONEER CONNECT
ALL RIGHTS RESERVED